EPOBASIC®

Standard remote control for all spreaders – clear and easy to use.





EPOKE EPOBASIC®

The logical designed remote control for all spreader functions.

The practical, large softkey buttons make reliable spreader operation possible for the driver. By means of the illuminated display and LED keys all settings are also clearly visible in the dark and thus may be easily evoked/changed. With a quick glance the driver gains a view of the

functional status of the spreader, whereby the traffic safety is increased.

The flexible stand allows the operator to adjust the remote control into an ergonomically correct position for him and thus keep any physical strain to a minimum.





(1) Function key



Material quantity Dry material



Material quantity Liquid



(2) Spreading width



(3) Spreading pattern



(4) Spreading quantity

- (1) Function buttons F1, F2 and F3 are used to predetermine 3 sets of frequently used settings. In this way the driver is able to adjust the spreading width, the spreading quantity and the spreading symmetry **simultane ously** by pushing one button only.
- (2) Adjustment of the spreading width to the road width.
- (3) By turning the knob for spreading symmetry it is possible to move the set spreading pattern to the left or right, for example in the case of side wind correction.
- (4) The turn lane buttons are used to adjust the spreading pattern to the right or the left, respectively, at turn lanes, bus stops or the like, while at the **same time** maintaining the opposite edge of the spreading pattern unaffected.



Epoke® A/S Vejenvej 50, Askov DK-6600 Vejen Tel. +45 76 96 22 00 Fax +45 75 36 38 67 epoke@epoke.dk www.epoke.dk



In order to maintain the high and uniform product standard Epoke® A/S has been certified by Lloyd's register to ISO 9001:2008. TLG B-3 approval GS approval E1 approval

RoHS directive

WEEE directive

